



Asher Tent Assembly Manual



Contents List:

1x Groundsheet
1x Top Cover
4x Walls
8x Black Iron Screw Plates
8x Double-Sided Short Clip Straps
8x White Strap Belt Tensioners
8x Silver Heavy Duty Structural Screw Stakes
1x Center Pole Holder
3x Center Pole Sections
2x Center Pole Cylindrical Joints
1x Center Pole Top Cover
3x Tent Bags
2x Small Drawstring Stake Bags
4x Tent Belts

Number of Pieces Depending on Tent Size:

Items Needed for Assembly:

- Hammer or Mallet
- Ladder or Steep Stool



©
TREND
TENTS
INC.
Phone:
(866)
948-008
8

4M Asher Tent:	5M Asher Tent:	6M Asher Tent:
16x Black Ground Stakes	16x Black Ground Stakes	16x Black Ground Stakes
16x Silver Ground Stakes	19x Silver Ground Stakes	19x Silver Ground Stakes
28x Black Pole Sections	36x Black Pole Sections	36x Black Pole Sections
28x Silver Pole Sections	28x Silver Pole Sections	36x Silver Pole Sections


Asher Tent Assembly

This tent requires 4-5 people for assembly. Please use caution when assembling the tent. If assembling on concrete or a deck, you will need nails or weights to secure the guylines.

Step 1: Lay out the groundsheet in the desired location. Take the black iron screw plates and align them with the screw holes at each corner of the groundsheet, ensuring the handle is facing outward.


Step 2: Insert two black ground stakes into the smaller screw holes on each side of the black iron screw plate and hammer those in. Then, secure the D-shaped loops along the perimeter of the tent with the silver ground stakes.

Step 3: Lay the top cover over the groundsheet and zip it on at each corner only.

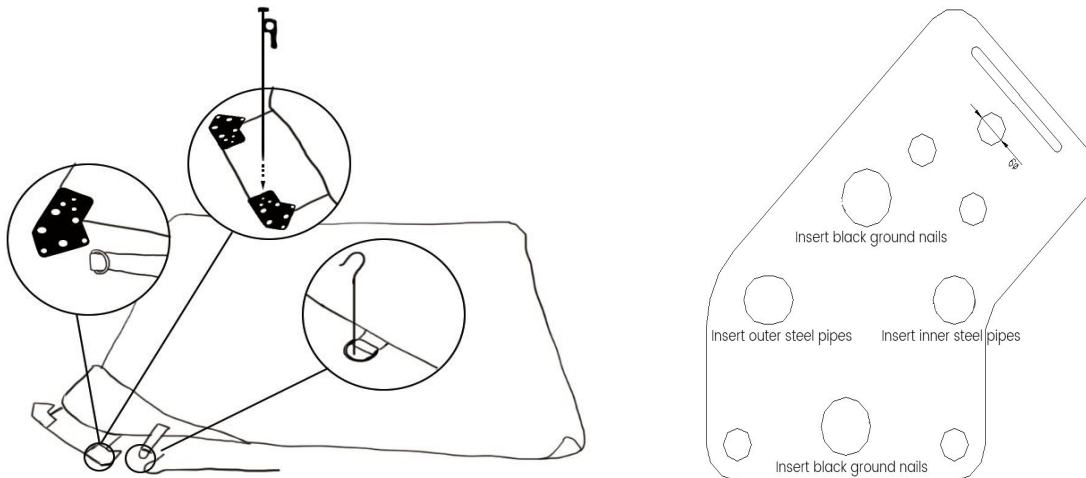




Step 4: Assemble the center pole. The pole consists of three pole sections, a top round cover, a bottom metal pole holder, and two smaller cylindrical middle pieces.

- A. Snap one section of the pole into the bottom pole holder. Then, insert one of the smaller cylindrical metal pieces into that section.
- B. Add the middle pole section and repeat the process from Step 6A.
- C. Once the pole is fully upright, attach the top round cover to the top of the pole.
- D. Position the pole through the door of the tent and erect it in the center, aligning it with the center of the triangular fabric patch with vents at the top of the tent and the square patch on the groundsheet.

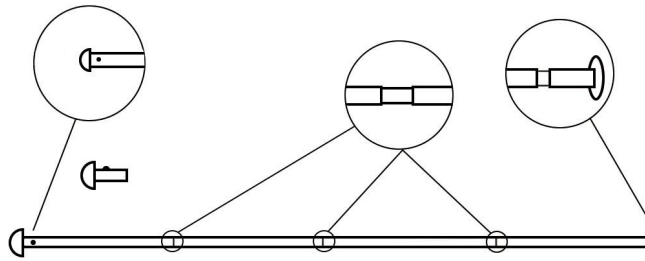

Step 5: Two people are required for this step. Take the silver pole sections (there should be an equal number of pole sections on each side) and attach them together to form one long curved pole. Ensure that the poles with the pointy ends are at the ends of the curved pole. With one person pushing it through the inner fabric openings, the other person should pull it through the long fabric loops, making sure it goes through the smaller white fabric loops as well. Leave the poles unsnapped for now. Repeat this step on all sides.


Step 6: Two people are required for this step. Take the black pole sections (there should be an equal number of pole sections on each side) and attach them together to form a curved pole. Ensure that the poles with the pointy ends are at the ends of the curved pole. With one person pushing it through the outer fabric openings, the other person should pull it through, ensuring it passes through the top white fabric loops. Leave the poles unsnapped for now. Repeat this step on all sides.

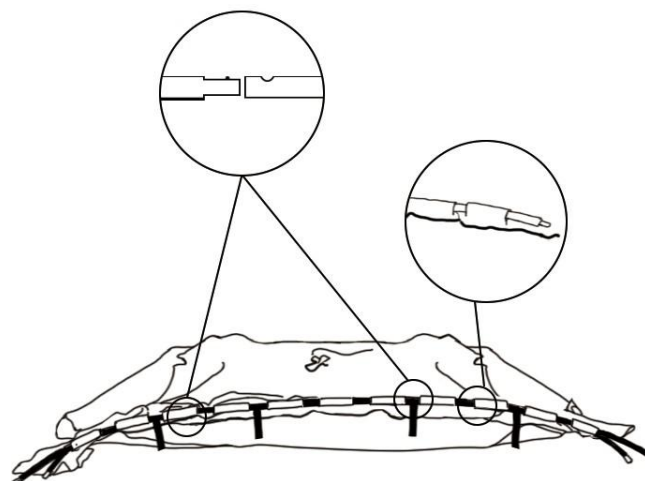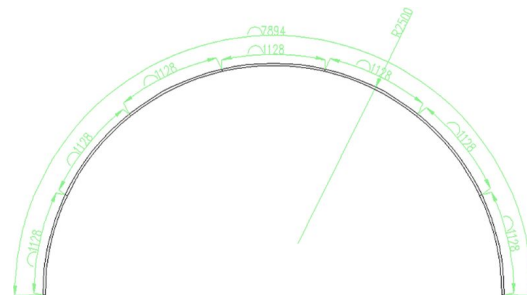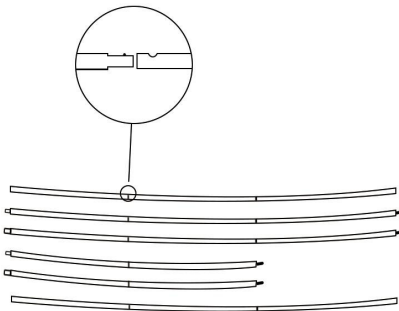

Step 7: Snap the black poles into the inner holes on the black iron screw plates at each end of the tent. Then, snap the silver poles into the outer holes, across from the holes for the black poles. Repeat this on all sides.

Step 8: On the front side of the tent, take the shorter white straps with the silver metal clips on each end and clip them into the bottom fabric loops on the outside of the tent along the black pole awning.

- A. Clip the white strap belt tensioner with the silver metal clip onto the strap you attached in Step 8A. Pull the strap to the desired tension point.
- B. Mark that spot, then insert a silver heavy-duty structural screw stake and secure it at the selected spot. You will need to loosen the strap to tie it to the structural screw stake, then retighten it using the black buckle tensioner.
- C. Repeat this process on the back of the tent, then on either side.

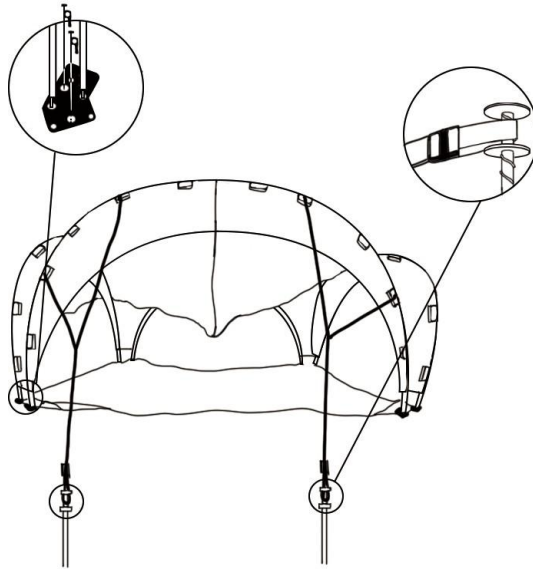

Step 9: Zip in the walls to each side of the tent. Start with the top portion of the wall (you may need a ladder) and then zip the groundsheet to the bottom part of the wall (you will need two people for this). Ensure the main double doors are facing the front of the tent.

At this point, the tent should be fully assembled. Please read the 'Additional Information' section for maintenance direction and tips.



Disassembling Your Asher Tent

Step 1: Unzip the tent walls from all sides. To fold, ensure the outward -facing wall is face down . Take one corner of the wall and fold it where the straight edge of the window is. Repeat on the other corner.

- A. You should now have a rectangular shape with a rounded top. Fold one side over the other.
- B. Grab the bottom and fold it in half so both ends are touching.
- C. Repeat this process on all walls. Once complete, place all folded walls into one of the bags.

Step 2: Remove the center pole from the tent and dismantle it. Place the metal sections, top cover, cylindrical metal joints, and pole holder in one of the empty

Step 3: Remove all silver ground stakes from the D-loops and black ground stakes from the black iron screw plates. Unsnap the black and silver poles from the black iron screw plates. Place the silver ground stakes, black ground stakes, and black iron screw plates in the same bag as the center pole.

Step 4: Loosen the white strap belt tensioner and untie it from the structural screw stakes. Remove the structural screw stake from the ground and place it in the bag with the stakes. Unclip the white strap from the strap attached to the tent. Unclip the shorter white straps from the front side of the tent. Repeat this on all sides.

Step 5: Remove the silver and black poles from every side of the tent. Tip: It is easier to take the poles apart in pieces.

Step 6: Take each corner of the tent and fold it into the center.

- A. Fold one side of the tent over the other, following the center crease as a guide.
- B. With the top cover folded in half, fold one side over the other, creating a long rectangle.
- C. Make another half-fold to create a smaller rectangle.
- D. Finally, make one more half-fold. Ensure the folded top cover is as flat as possible.
- E. Roll the folded top cover and secure it with the small white belt straps. Place the rolled cover in the last remaining empty bag.

Step 7: Fold the groundsheet in half, ensuring it lies as flat as possible.

- A. Take one side of the folded half and fold it toward the middle. Fold the other side over the first.
- B. You should now have a long folded rectangle. Fold it in half one more time. The groundsheet should now fit into the same bag as the top cover.
- C. Roll the groundsheet and secure it with the small white belt straps. Add it to the top cover bag.

Your tent should be completely packed. Please read the 'Additional Information' section for maintenance direction and tips.

Additional Information:

Maintenance:

- The fabric must be fully dry before storing the tent.
- Never store the tent while it is wet for longer than two days to avoid mold damage.
- The canvas has been treated to protect it from dirt, UV rays, and mold for up to 5 years of camping. After this period, the tent may need to be re-treated.
- Maintenance begins when setting up the tent. Incorrect assembly can cause uneven tension, leading to damage. Regular guyline maintenance is necessary to ensure proper setup.
- Our tents come with a one-year warranty, covering rips, tears, or structural issues. For customer service, contact us at (866) 948-0088 or info@trendtents.com.

Lifespan:

- The lifespan of your tent depends on camping and weather conditions. With proper maintenance, the tent should last up to 5 years.

Mold and Stains:

To avoid mold and stains:

- Store the tent completely dry.
- If mold forms, use a soft brush or sponge with clean water to scrub it off. Let the tent dry thoroughly after cleaning.
- Use only specialized cleaning products for tough stains. Harsh chemicals can damage the cotton fibers. After cleaning, it's recommended to re-treat the cleaned areas of the tent.