



AUTOMATIC TENT

INSTRUCTION MANUAL

Content List:

Included Items:

1x Camouflage Black-Coated Rainfly
2x Awning Poles
4x 8.20 ft Guylines
2x 13.10 ft Guylines
22x Ground Stakes

Items Needed for Assembly:

Hammer or Mallett



USA

© TREND TENTS INC.

Phone: (866) 948-0088

Email: info@trendtents.com

UK

© TREND TENTS LTD.

Phone: 01215168817

Email: contact@trendtents.co.uk

SETTING UP THE AUTOMATIC TENT

1. Unpack the tent and lay it flat on the ground with all sides fully unfolded.



2. Grasp the top and bottom sections of the yellow locking mechanism on the tent roof. Extend the pole until you hear a click, confirming the lock is engaged.



3. Repeat the locking process for all four corner poles.



4. Anchor all four corners by hammering the included stakes diagonally into the ground.



5. Use guylines to secure the tent on all the sides.



6. Place the rainfly over the top of the tent and attach the four corner hooks of the rainfly to the tent poles.



7. Insert the awning poles into the grommets at the top of the rainfly and secure them with guylines.



8. Attach one end of the rainfly's bottom edge to the stake at the base of a tent pole, and stake down the other end.



9. Setup is now complete.



Note: This tent can be used without setting up the rainfly.



PACKING UP THE AUTOMATIC TENT

1. Remove the stakes and guylines securing the rainfly, then take off the rainfly.



2. Remove the stakes at the bottom of the four vertical poles. Press the yellow buttons on the poles to collapse them.



3. Press the yellow button on the top frame poles to collapse the tent frame.



4. Fold the tent compactly, place it into the storage bag, and secure the closure — your pack-up is complete!



ADDITIONAL INFORMATION

Maintenance

- The canvas must be fully dry before you store the tent.
- Never keep the tent stored away wet for longer than two days, otherwise mold can cause damage to the canvas.
- The canvas has been treated to protect it from dirt, UV rays, and mold which lasts up to 5 years of camping. After that time has passed, the tent may need to be re-treated.
- Maintenance starts when setting up the tent. If the tent is incorrectly assembled, the uneven tension can cause damage to the canvas. Daily guyline maintenance is necessary to ensure correct set up.
- All of our tents come with a one-year warranty. This covers any rips, tears, or structural issues. Please contact us for any customer service related questions or concerns.

Lifespan

- The lifespan of your tent depends on camping and weather conditions. With proper maintenance, the tent should last of up to 5 years.

Mold and Stains

- To avoid mold and stains on your tent: Store the tent 100% dry.
- In the case the tent grows mold, use a soft brush or sponge with clean water to scrub off the mold. Make sure to let the tent completely dry after this.
- Only use specialized cleaning products to remove difficult stains. Harsh chemicals and cleaners can cause the cotton fiber of the canvas to deteriorate and become damaged. It is recommended to re-treat the areas of the tent that have been cleaned.