



BRISA TENT MANUAL

CONTENT LIST

- 1x Carrying Bag
- 1x Galvanized Steel Center Pole
- 1x Galvanized Steel A-Shape Door Pole
- 3x Aluminum Rods
- 1x Rain Cap
- 8x White Reflective Guylines
- 8x Black Straight Ground Stakes
- 14x Small Silver Ground Stakes
- 1x Repair Kit
- 1x Mallet



© TREND TENTS INC.
Phone: (866) 948-0088
Email: info@trendtents.com

SETTING UP YOUR BRISA

- Unpack the tent and lay it with the groundsheet down. Find the door and rotate the tent to face the desired direction.

1



- Pull the triangular groundsheet tight and place the silver ground stakes in the top hole on each corner of the tent. Then, secure the metal loops located at the bottom of the tent on all sides with the silver ground stakes.

2



SETTING UP YOUR BRISA


3

- Insert the three aluminum rods into the window sleeves. The two longer rods will go on either side of the tent and the shorter rod will go in the window sleeve at the back of the tent. Stick the ends of each rod into the smaller hole on the triangular piece of groundsheet.



4

- Attach the six longer guylines to the two sides and the back of the tent, with each side has four loops. Secure one end of the guyline to the loop. Undo the adjustment buckle on the other end, pass it through the loop, and re-secure it, creating a V-shape. Finally, fasten the guyline using black straight ground stakes. Do not fully tighten the guylines yet, leave some slack for final adjustments.

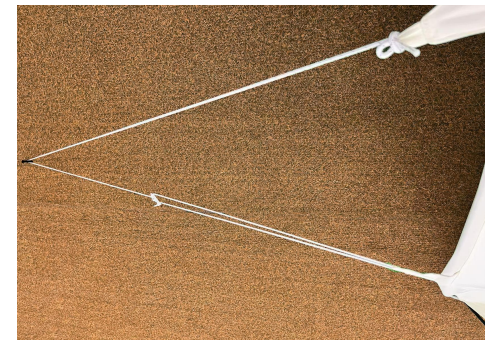

SETTING UP YOUR BRISA

5

- Take the main straight pole through the door, find the center of the cone and push the pole and tent up until it's vertical.



6

- Assemble the A-frame inside the tent and place it in the door (front opening of the tent). Put the screw through the hole at the top center of the door (make sure to remove the plastic rain cap from the screw before assembly) and check that the ends of the A-frame are in the corners on each side of the tent opening. Then, step outside the tent and attach the plastic rain cap to the screw at the top of the tent.



SETTING UP YOUR BRISA

7

- Zip the door shut and tie the two shorter guylines to the small loops above the door, extending them towards the front on both sides and securing them with black stakes while leaving some slack. Then, secure the elastic loops located near the bottom of the tent on all sides around the silver straight stakes, making sure not to put too much tension.



8

- Once all the stakes are secured, make the final adjustments to the guylines to create the desired tension. By doing it this way and following the seam lines, your Brisa will look like this: perfect and creaseless.



HOW TO PACK UP YOUR BRISA

The following steps will explain how to pack up your Brisa after use. The tent is meant to be stored completely dry to avoid any molding or mildew. The tent can be disassembled damp but must be thoroughly dried out before being packed. Typically, it will take about 24 hours for the tent to fully dry.

1

- The canvas should be fully dry before you store the tent. Remove all the poles and stakes from the tent while keeping the canvas off the ground to avoid staining. Without standing on the canvas, fold one side of the tent over the other so half of the groundsheet is exposed and facing up.

3

- Once that half of the groundsheet has dried and/or been cleaned, fold the other side of the tent over so that side of the groundsheet can be dried and/or cleaned. You may want to move the tent from the original pitch spot to avoid dirtying the groundsheet you just cleaned.

2

- Let that half of the groundsheet dry out (if necessary) and remove any dirt or debris that may have accumulated during usage. If it is not a dry day, you'll need to dry the tent before packing it. The idea is that you always have the canvas touching the canvas and the groundsheet touching the groundsheet so even if the tent is wet, you avoid potential staining.

4

- Once the tent is fully dry and/or cleaned, unfold it so the ground sheet is flat on the ground and the canvas is laid as flat as possible over top. Then, fold each side over meeting in the middle so the groundsheet is facing up.
- You will then need to fold the extra fabric over the groundsheet so the canvas is facing upwards. The final fold will be one side over the other, so that the width is the same as the bag it came in. Now, fold the strip in half and place the pole and peg bags at one end.

5

- Roll the tent into a tight bundle, making sure to remove all the air. Then, use the tent belts to secure the tent into a roll.



6

- Slip one end of the rolled-up tent into the bag, then slip the other end in as well. Add the rest of the equipment and zip the bag shut.



OTHER INFORMATION

Maintenance

- The canvas must be fully dry before you store the tent.
- Never keep the tent stored away wet for longer than two days, otherwise mold can cause damage to the canvas.
- The canvas has been treated to protect it from dirt, UV rays, and mold which lasts up to 5 years of camping. After that time has passed, the tent may need to be re-treated.
- Maintenance starts when setting up the tent. If the tent is incorrectly assembled, the uneven tension can cause damage to the canvas. Daily guyline maintenance is necessary to ensure correct set up.
- All of our tents come with a one-year warranty. This covers any rips, tears, or structural issues. Please contact us at (866) 948-0088 or info@trendtents.com for any customer service related questions or concerns.

Lifespan

- The lifespan of your tent depends on camping and weather conditions. With proper maintenance, the tent should last of up to 5 years

Mold and Stains

To avoid mold and stains on your tent:

- Store the tent 100% dry.
- In the case the tent grows mold, use a soft brush or sponge with clean water to scrub off the mold. Make sure to let the tent completely dry after this.
- Only use specialized cleaning products to remove difficult stains. Harsh chemicals and cleaners can cause the cotton fiber of the canvas to deteriorate and become damaged. It is recommended to re-treat the areas of the tent that have been cleaned.