



Tipi Tent Assembly Manual



Content List:

Included Items:

1x Tent Bag

1x Stake Bag

1x Canvas Tent

1x Center Pole

2x Tent Belts

11x Guylines

11x Large Silver

Guyline Stakes

12x Small Silver

Ground Pins



Items Needed for Assembly:

- Hammer or Mallet

Tipi Tent Assembly

Step 1: Open the tent bag and check that all the contents are present.



Step 2: Lay the tent flat in the desired location and locate the door.



Step 3: Insert the smaller silver ground stakes through the D-rings around the perimeter at the bottom of the tent. Secure the elastic rings around the perimeter onto the stakes as well.




Step 4: Assemble the center pole. Then, position one end of the pole at the center top of the tent and the other end in the middle of the groundsheet to prop up the tent. Make sure the top cover is properly installed on the support pole before lifting.



Step 5: Use the large black ground stakes to secure all the guylines around the tent. Tie one guyline to a top loop and the loop directly below it, creating a V-shape. You will have to untie and retie the guyline slider from one end of the guyline to do this. Use the larger silver ground stakes to secure the guyline.



Step 6: Tighten all the guylines by adjusting the guyline slider. The installation is now complete.

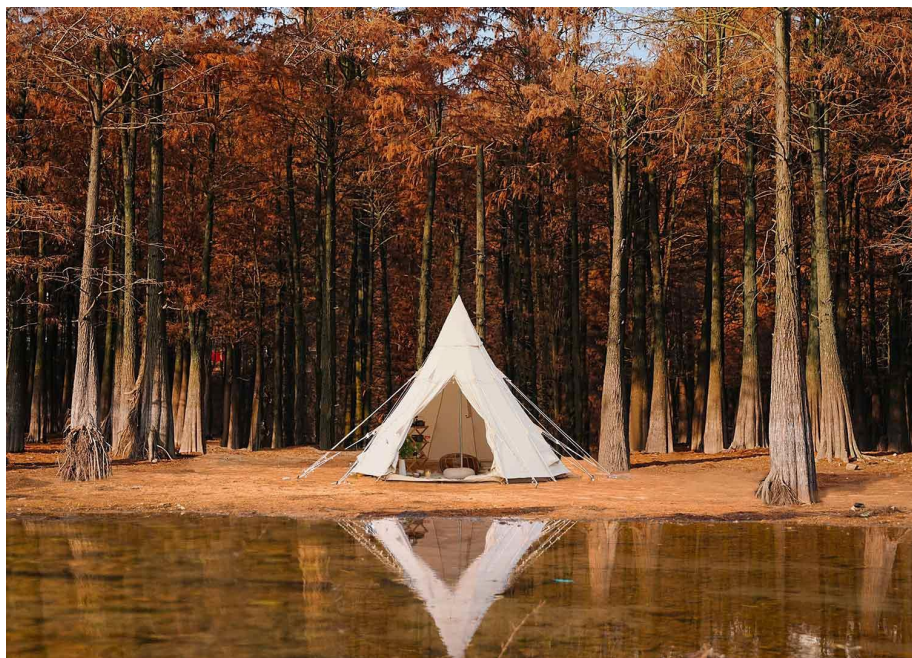

Disassembling Your Tipi Tent


Step 1: Remove the large ground stakes securing the guylines. Untie the guylines from the bottom loops. Leave the guylines tied to the top loops.






Step 2: Place all the large ground stakes in one of the stake bags. Disassemble the center pole and leave it to the side for now.



Step 3: Remove the small ground stakes from the groundsheet and add them to the other stake bag.

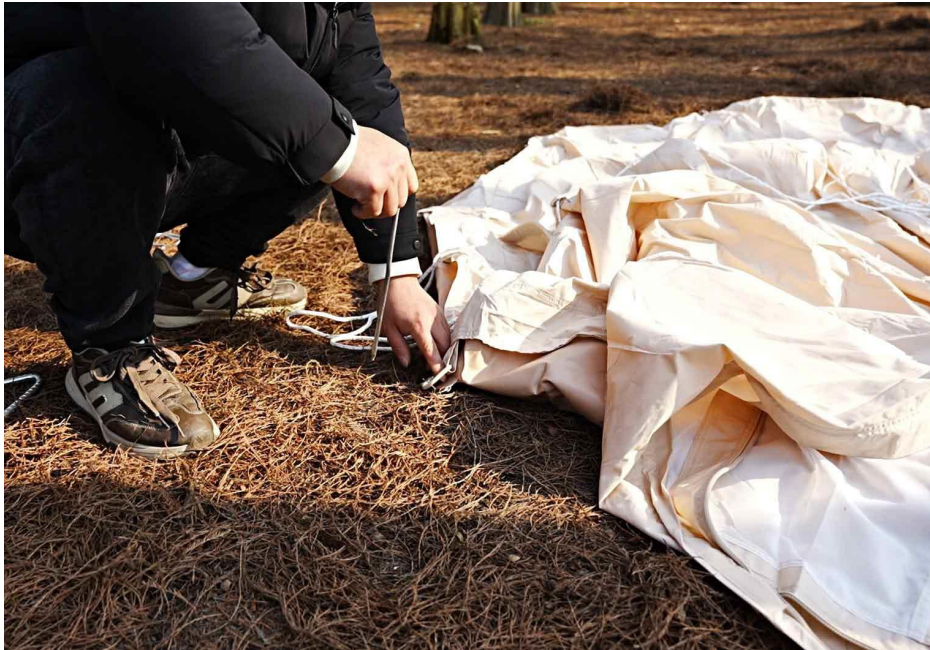

Step 4: Fold one side of the tent into the center and repeat the fold with the other side. Fold in half again to make a long rectangle and then roll up the tent. Now rolled, use the belts to secure the tent.

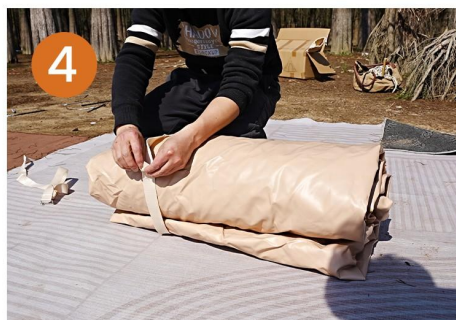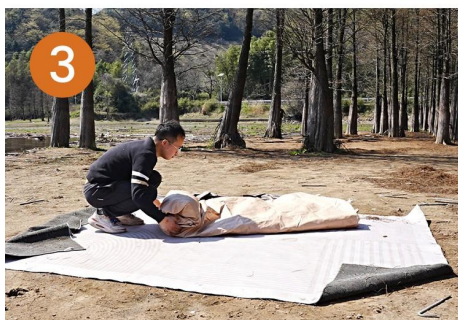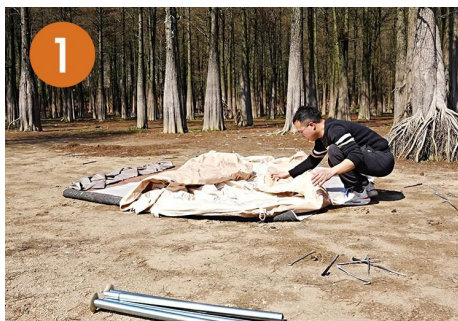

Step 5: Place the tent, ground stakes, and center pole into the storage bag.



Step 6: Zip up the bag. Disassembly is now complete.



ADDITIONAL INFORMATION

Maintenance

- The cotton must be fully dry before you store the tent.
- Never keep the tent stored away wet for longer than two days, otherwise mold can cause damage to the canvas.
- The canvas has been treated to protect it from dirt, UV rays, and mold which lasts up to 5 years of camping. After that time has passed, the tent may need to be re-treated.
- Maintenance starts when setting up the tent. If the tent is incorrectly assembled, the uneven tension can cause damage to the canvas. Daily guyline maintenance is necessary to ensure correct set up.
- All of our tents come with a one year warranty. This covers any rips, tears, or structural issues. Please contact us at (866)-948-0088 or info@trendtents.com for any customer service related questions or concerns.

Lifespan

- The lifespan of your tent depends on camping and weather conditions. With proper maintenance, the tent should last of up to 5 years.

Mold and Stains

To avoid mold and stains on your tent:

- Store the tent 100% dry.
- In the case the tent grows mold, use a soft brush or sponge with clean water to scrub off the mold. Make sure to let the tent completely dry after this.
- Only use specialized cleaning products to remove difficult stains. Harsh chemicals and cleaners can cause the cotton fiber of the canvas to deteriorate and become damaged. It is recommended to re-treat the areas of the tent that have been cleaned.